

TENWAY BF-480 V1.0 Software Programming Step

Software operating environment Win7 / Win10.

Currently the software does not support Mac OS system

Note :WIN 7 needs to install USB Drive.

WIN10 doesn't need to install USB Drive under normal conditions.

If the USB driver cannot be recognized, it is recommended to install it.

Make sure Radio is powered on and connect to Compute using Cable.

Step1. Open [BF-480 V1.0] File

1.1.1 Find the software file [BF-480 V1.0] click to open




Step2. Open BF-480.exe

2.1.1 In the folder to find the software to open the [BF-480.exe]




3.1.2 Click to jump out Language File Setup to choose Language Mode [Chinese] or [English] and then press [Ok]

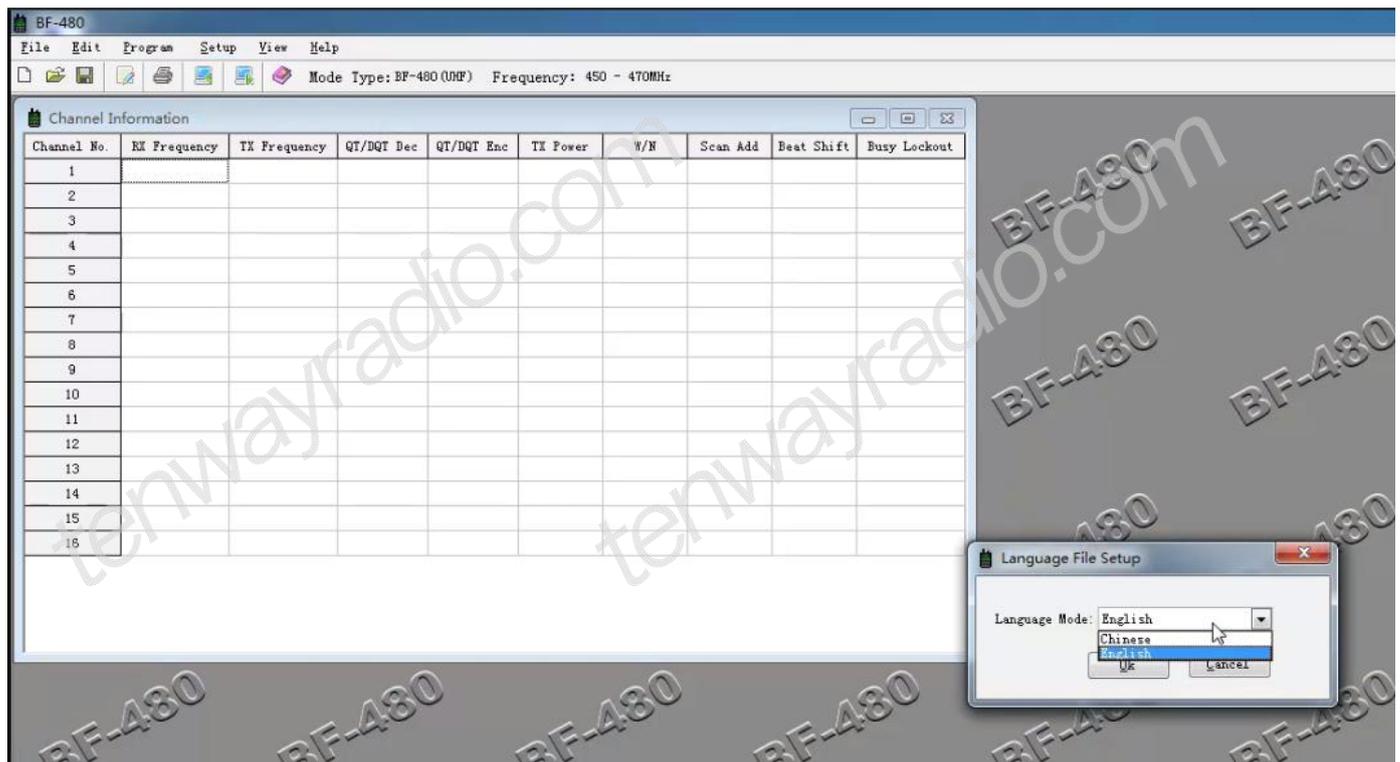

3.2 Chinese Interface

3.2.1 See the Software interface to click [设置(S)] to jump out of the option bar in the option bar in the lowest [语言设置(L)] Click.

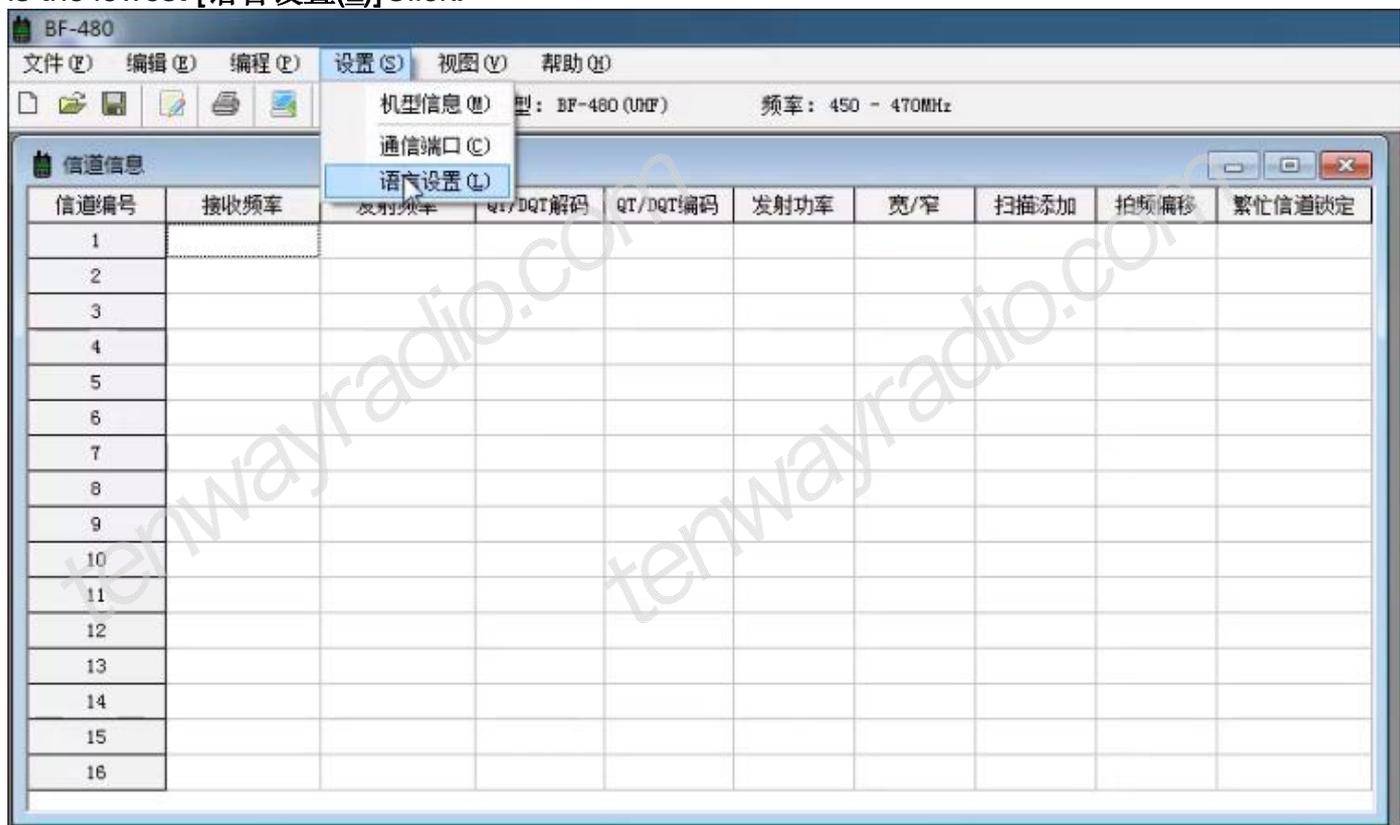


3.2.2 Click to jump out 语言设置--语言模式: Choose [英文] and then press [确定]




Step4. Communication Port Choose

4.1.1 See the Software interface to click [Setup] to jump out of the option bar in the option bar is the lowest [Communication Port] Click.

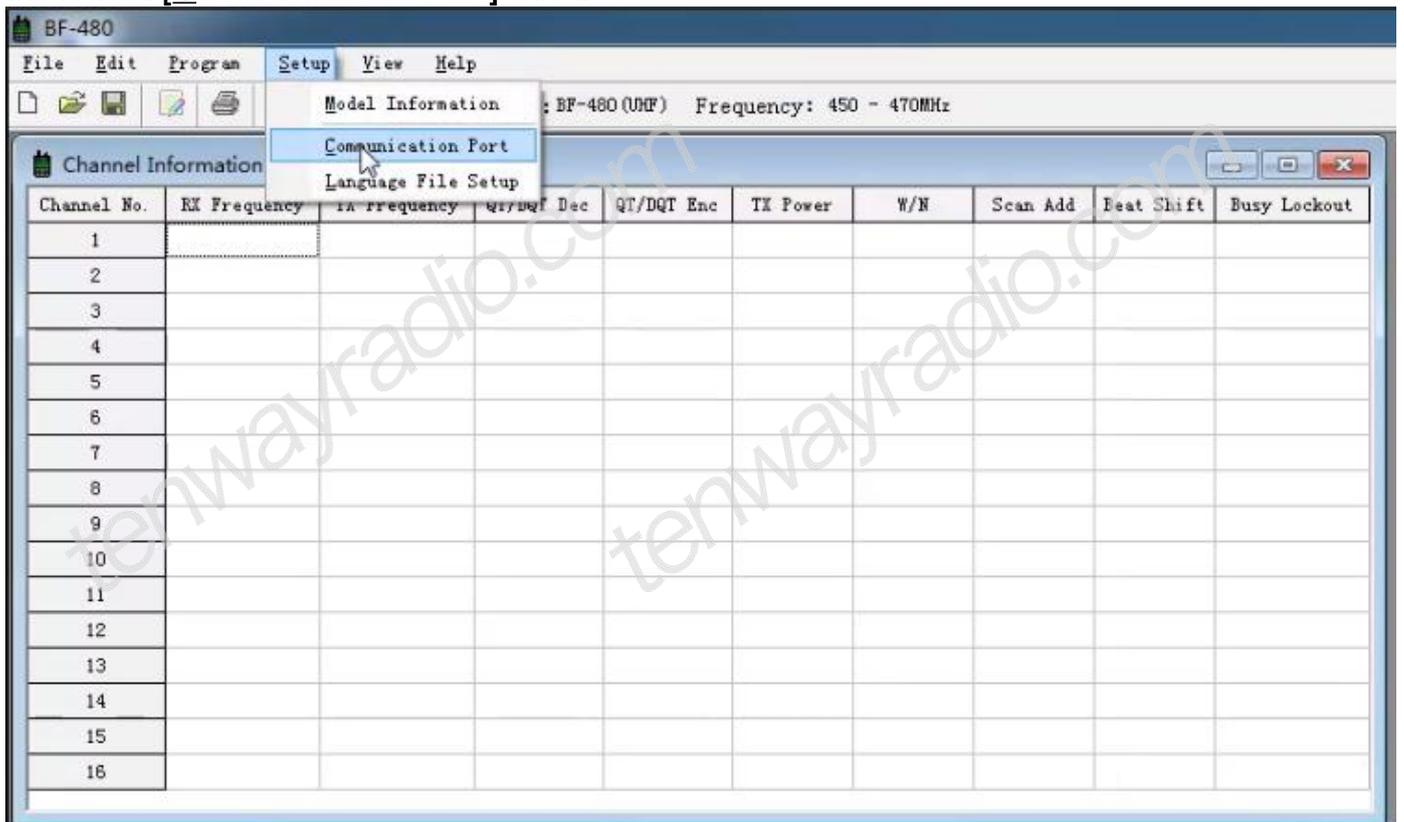


6.1.3 Click to jump out Confirmation-- Reading Completed [确定]

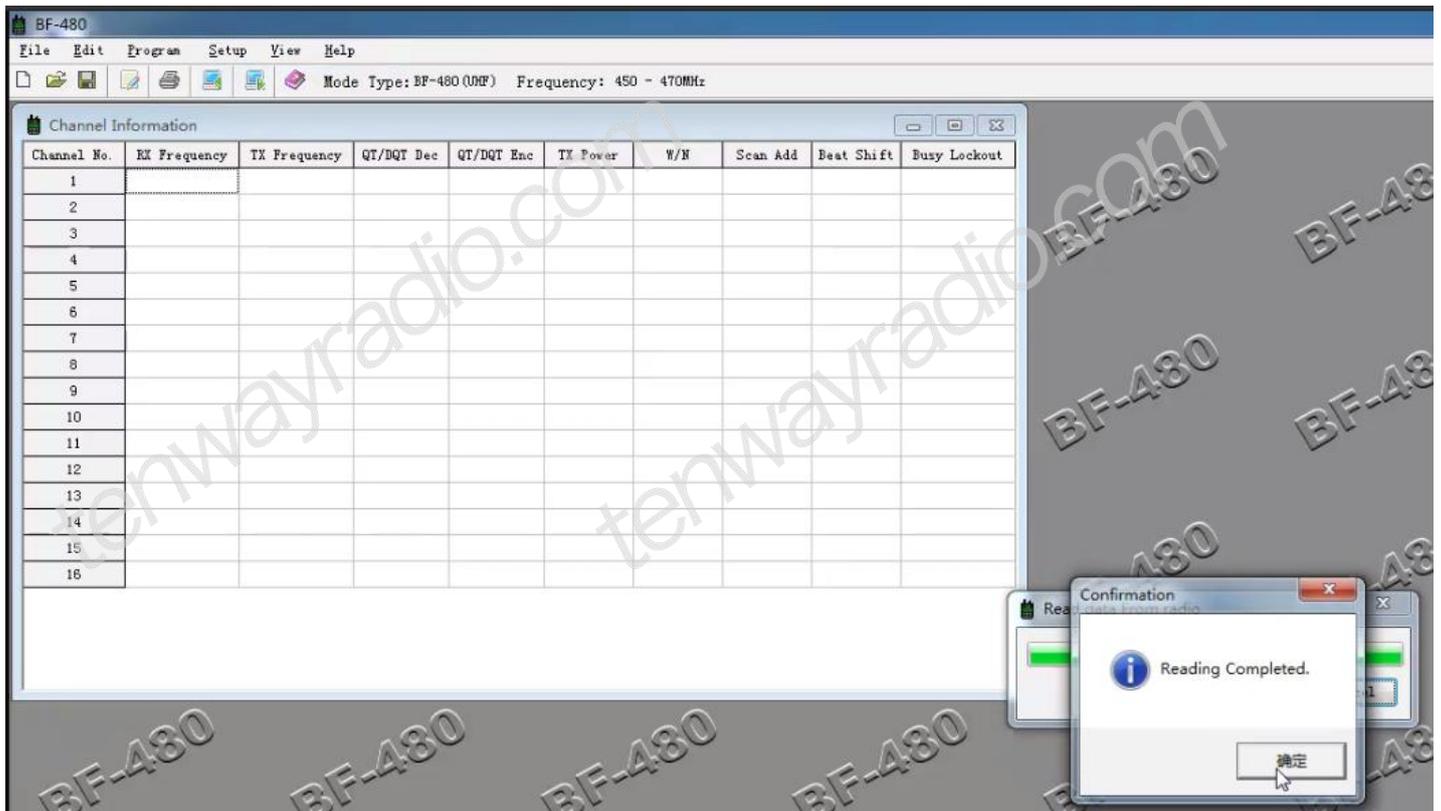

Step7. Edit Channel Date

7.1 Edit RX Frequency and TX Frequency (Keep the same frequency value), Click Frequency box Edit Frequency (400.00000--470.00000MHz) value; Frequency Step (25.0/12.5/6.25/5KHz).

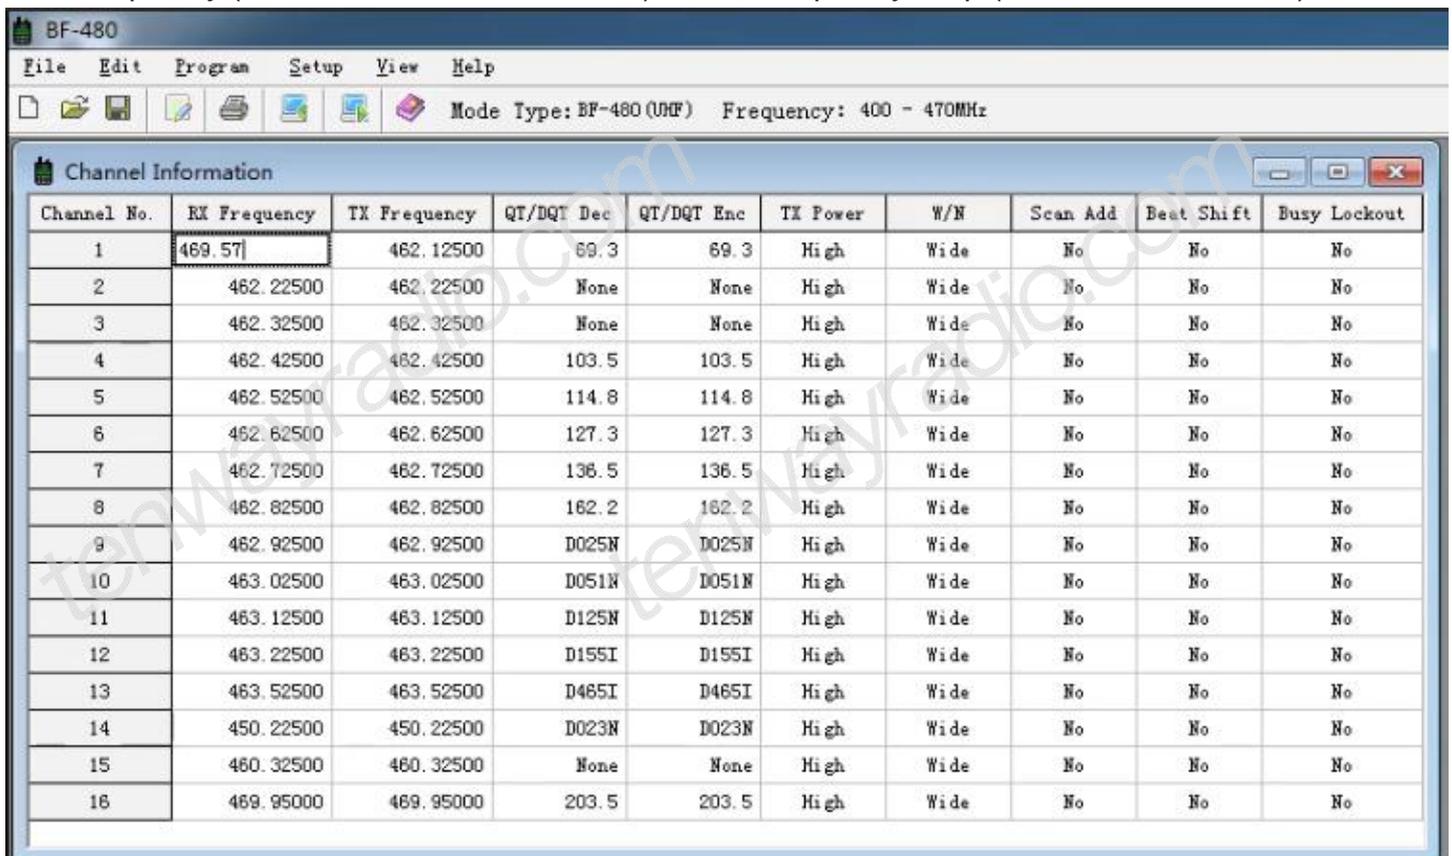

Step8. Edit QT/DQT Date

8.1 Edit QT/DQT Dec and QT/DQT Enc (Keep the same frequency value).

Note: Filtered signal encryption [50 CTCSS] / [105 CDCSS].

BF-480

File Edit Program Setup View Help

Mode Type: BF-480 (UMF) Frequency: 400 - 470MHz

Channel Information

| Channel No. | RX Frequency | TX Frequency | QT/DQT Dec | QT/DQT Enc | TX Power | W/N | Scan Add | Beat Shift | Busy Lockout |
|-------------|--------------|--------------|------------|------------|----------|------|----------|------------|--------------|
| 1 | 469.57500 | 469.57500 | 59.3 | 69.3 | High | Wide | No | No | No |
| 2 | 462.22500 | 462.22500 | None | None | High | Wide | No | No | No |
| 3 | 462.32500 | 462.32500 | 69.3 | None | High | Wide | No | No | No |
| 4 | 462.42500 | 462.42500 | 71.9 | 103.5 | High | Wide | No | No | No |
| 5 | 462.52500 | 462.52500 | 74.4 | 114.8 | High | Wide | No | No | No |
| 6 | 462.62500 | 462.62500 | 77.0 | 127.3 | High | Wide | No | No | No |
| 7 | 462.72500 | 462.72500 | 82.5 | 136.5 | High | Wide | No | No | No |
| 8 | 462.82500 | 462.82500 | 136.5 | 162.2 | High | Wide | No | No | No |
| 9 | 462.92500 | 462.92500 | 162.2 | D025N | High | Wide | No | No | No |
| 10 | 463.02500 | 463.02500 | D025N | D051N | High | Wide | No | No | No |
| 11 | 463.12500 | 463.12500 | D051N | D125N | High | Wide | No | No | No |
| 12 | 463.22500 | 463.22500 | D125N | D155I | High | Wide | No | No | No |
| 13 | 463.52500 | 463.52500 | D155I | D465I | High | Wide | No | No | No |
| 14 | 450.22500 | 450.22500 | D465I | D023N | High | Wide | No | No | No |
| 15 | 460.32500 | 460.32500 | D023N | None | High | Wide | No | No | No |
| 16 | 469.95000 | 469.95000 | None | 203.5 | High | Wide | No | No | No |

Step9. Edit TX Power

9.1 Choose TX Power [High] or [Low], Note: Recommended to choose [High].

BF-480


File Edit Program Setup View Help

Mode Type: BF-480 (UMF) Frequency: 400 - 470MHz


Channel Information

| Channel No. | RX Frequency | TX Frequency | QT/DQT Dec | QT/DQT Enc | TX Power | W/N | Scan Add | Beat Shift | Busy Lockout |
|-------------|--------------|--------------|------------|------------|----------|------|----------|------------|--------------|
| 1 | 469.57500 | 469.57500 | 69.3 | 69.3 | High | Wide | No | No | No |
| 2 | 462.22500 | 462.22500 | None | None | Low | Wide | No | No | No |
| 3 | 462.32500 | 462.32500 | None | None | High | Wide | No | No | No |
| 4 | 462.42500 | 462.42500 | 103.5 | 103.5 | High | Wide | No | No | No |
| 5 | 462.52500 | 462.52500 | 114.8 | 114.8 | High | Wide | No | No | No |
| 6 | 462.62500 | 462.62500 | 127.3 | 127.3 | High | Wide | No | No | No |
| 7 | 462.72500 | 462.72500 | 136.5 | 136.5 | High | Wide | No | No | No |
| 8 | 462.82500 | 462.82500 | 162.2 | 162.2 | High | Wide | No | No | No |
| 9 | 462.92500 | 462.92500 | D025N | D025N | High | Wide | No | No | No |
| 10 | 463.02500 | 463.02500 | D051N | D051N | High | Wide | No | No | No |
| 11 | 463.12500 | 463.12500 | D125N | D125N | High | Wide | No | No | No |
| 12 | 463.22500 | 463.22500 | D155I | D155I | High | Wide | No | No | No |
| 13 | 463.52500 | 463.52500 | D465I | D465I | High | Wide | No | No | No |
| 14 | 450.22500 | 450.22500 | D023N | D023N | High | Wide | No | No | No |
| 15 | 460.32500 | 460.32500 | None | None | High | Wide | No | No | No |
| 16 | 469.95000 | 469.95000 | 203.5 | 203.5 | High | Wide | No | No | No |

10.2.1 Software interface jump out [Write data to radio] window, Click [Ok].

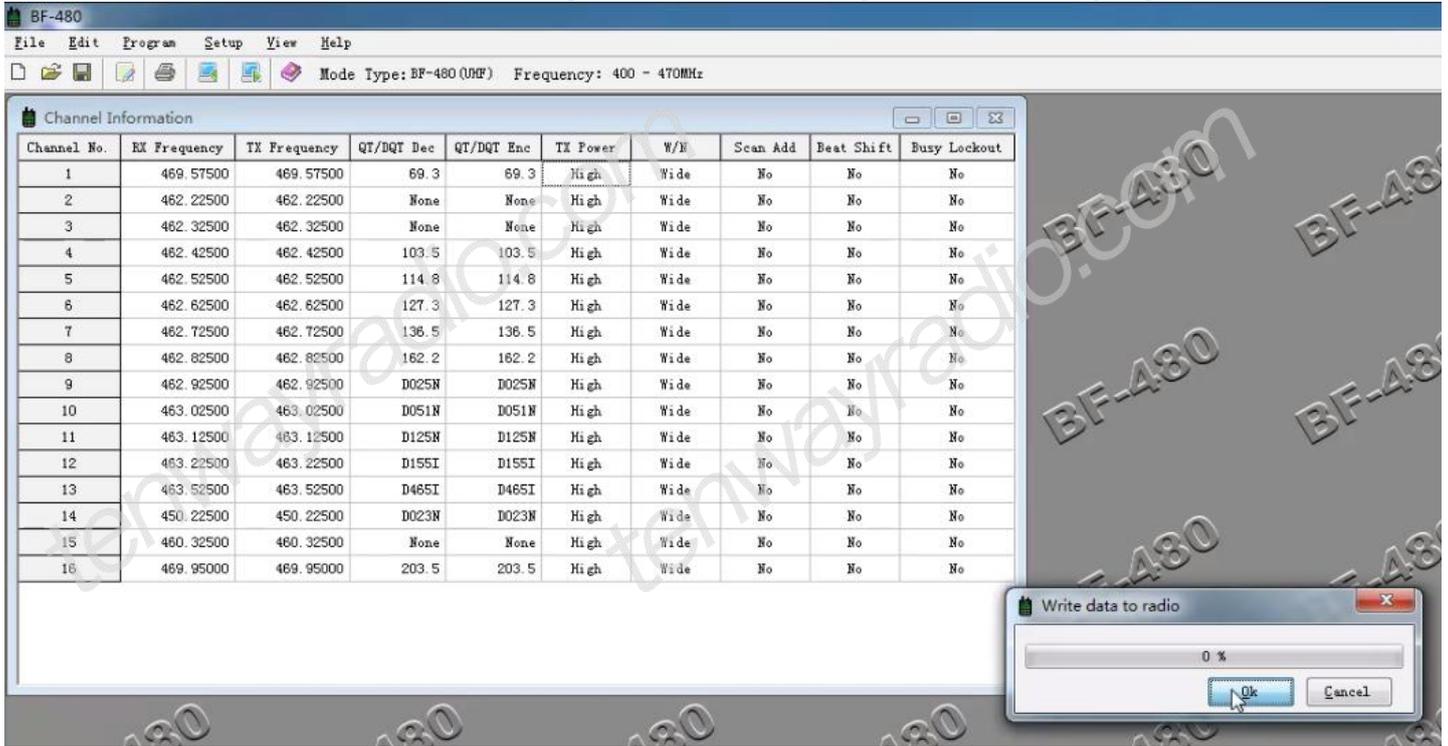

10.3.1 Software interface jump out [Confirmation]--[Writing Completed] window, Click [确定].

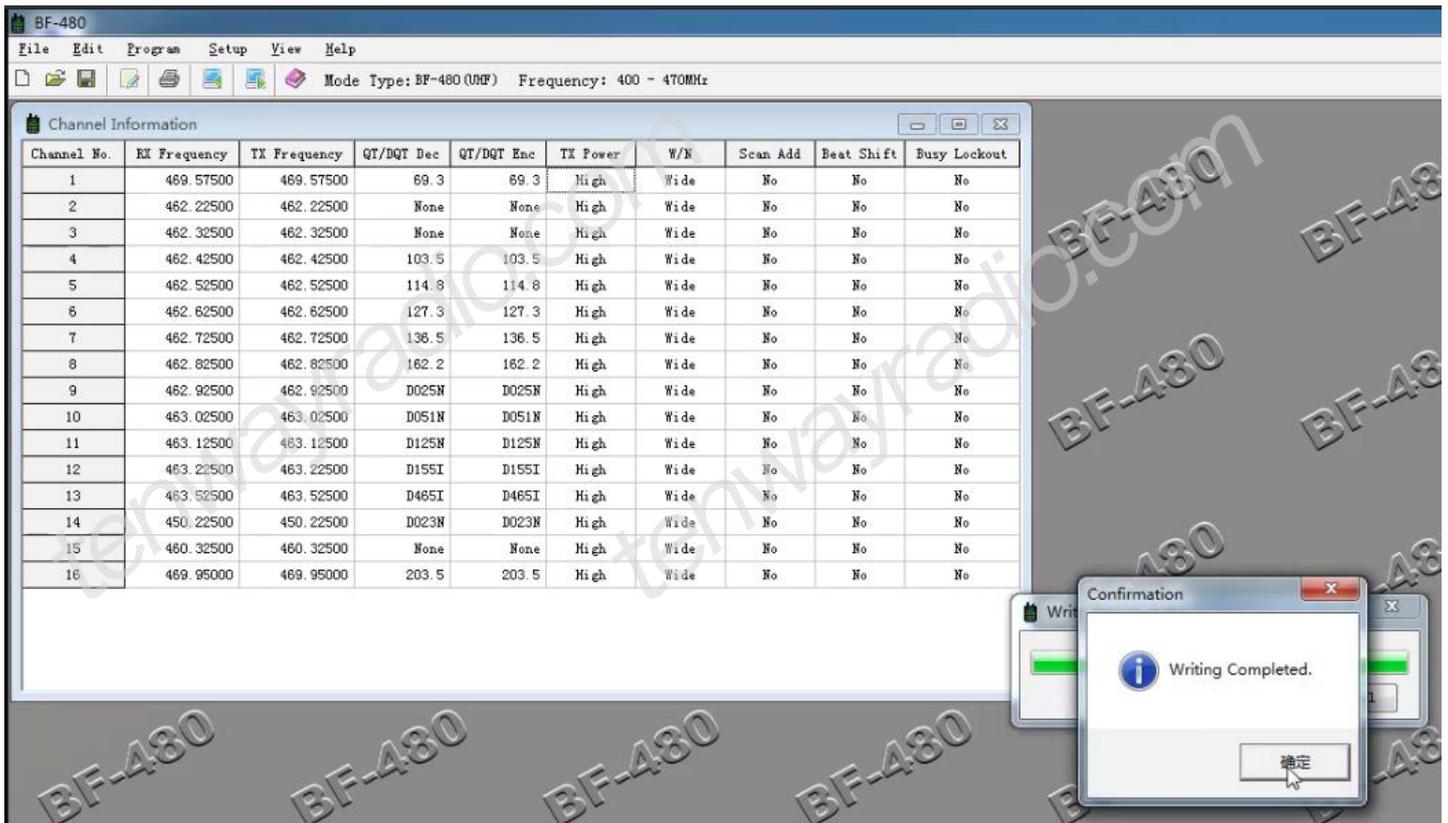

Success